


RGB/RGBW Touch Wheel RF Remote Controller

P/N: ES-RT-Z4-RGBW

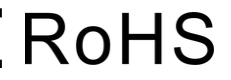

Match Remote Control

 
Choose how to pair or remove the device. Two options are available.

Match Key Method



Step 1:

Short press the Match/Set button.

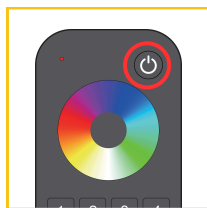

Step 2:

Single zone remote:
Immediately press the **ON/OFF key**.



Multiple zone remote:
Immediately press the **ZONE key**



Step 3:

The LED indicator will flash quickly several times, confirming successful pairing.

Remove Remote Control:



Step 1:


Press and hold the **MATCH key for 5s** to delete all matched remotes.



Step 2:


The LED indicator will flash quickly several times, confirming the remote was successfully removed.

Power Restart Method

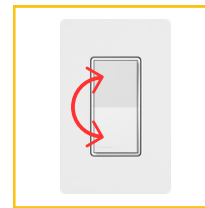

Step 1:

 Switch the power off then on again.

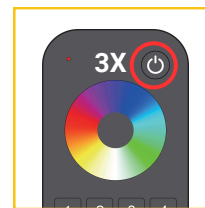

Step 2:


Immediately short press the **ON/OFF key 3 times** on the remote.



Step 3:


The LED indicator will flash quickly several times, confirming successful pairing.

Remove Remote Control:

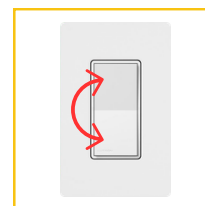


Step 1:

 Switch the power off then on again.

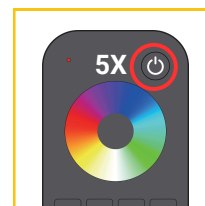

Step 2:

 Immediately short press the **ON/OFF key 5 times** on the remote.

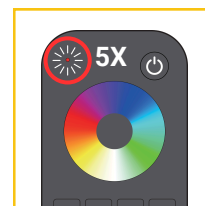

Step 3:

The LED indicator will flash quickly 5 times, confirming the remote was successfully removed.


RGB/RGBW Touch Wheel RF Remote Controller

P/N: ES-RT-Z4-RGBW



Key Function

ES-RT-Z4-RGBW 4 zone RGBW remote

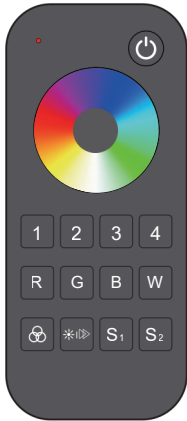

: Short press turn on/off all zone light.

: Touch to change current zone static RGB color.

: Short press select and turn on zone light, long press 2s turn off zone light.
Short press multiple zone key fastly, will select multiple zone synchronously.

: Short press get red, green or blue color directly.
Long press 1-6s adjust R/G/B brightness continuously to achieve millions of colors.

: For RGB light, short press turn on/off white(RGB mix),
long press 1-6s adjust saturation continuously,
namely change current static RGB color to mixed white slowly.
For RGBW light, short press turn on/off W channel,
long press 1-6s adjust W brightness continuously,
namely change saturation by add white color slowly.

: Adjust dynamic mode for current selected zone,
Short press run next dynamic mode, long press 2s run mode-cycle.

: For static color, adjust brightness, short press 10 levels,
long press 1-6s for continuous 256 levels adjustment.
For dynamic mode, adjust speed, short press 10 levels, long press 2s get the default speed.

: Short press recall the scene, long press 2s save current state into S1/S2.
The LED indicator display green when save OK.
4 zone recall or save synchronously.

RGB/RGBW Touch Wheel RF Remote Controller


P/N: ES-RT-Z4-RGBW




Back holder

Two options are offered for selection, please fix the back holder on the wall with two screws, or adhere the back holder to the wall with plaster.

1. Back holder without magnet

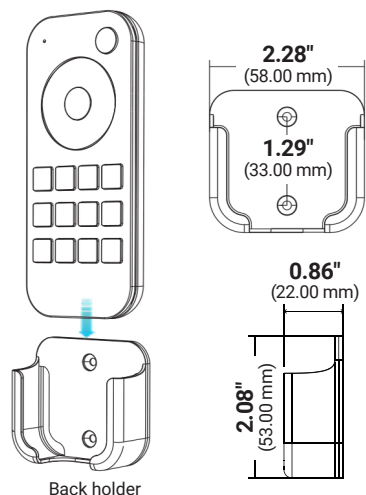

2. Back holder with magnet (The remote with built-in magnet)

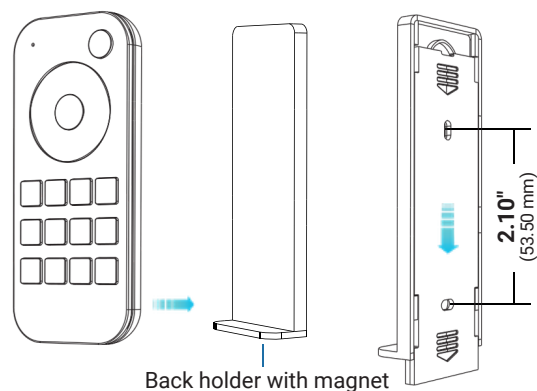


Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

RGB/RGBW Touch Wheel RF Remote Controller

P/N: ES-RT-Z4-RGBW

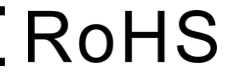

Features

- 4 independent zones
- Controls multiple EnoSync RGB/RGBW controllers
- Touch wheel for instant color selection
- Independent R/G/B/W channel dimming
- Dynamic mode control with adjustable speed
- Scene recall and save (S1-S2)
- AAx2 battery powered
- 30m RF range
- LED indicator feedback

Technical Parameters

Input and Output

Output signal:	RF(2.4GHz)
Working voltage:	3VDC (AAx2)
Working current:	<5mA
Standby current:	<10µA
Standby time:	1 year
Remote distance:	30m (Barrier-free space)

Safety and EMC

EMC standard:	EN IEC 55015/EN IEC 61547 ETSI EN 301 489-1/-3
Safety standard:	EN 61347-1/-2 EN 62493
Radio Equipment:	ETSI EN 300 440
Certification:	CE RoHS FCC UL

Environment

Operation temperature:	-30°C ~ +55°C/-22°F ~ +131°F
------------------------	------------------------------

Package

Dimensions (W x H x L):	2.08" x 0.68" x 4.8"
Gross weight:	0.088kg


Warranty and Protection

Warranty:	5 years
-----------	---------




The certification icon represents undergoing certification applications only, and final certification qualification subject to actual product.

Mechanical Specifications

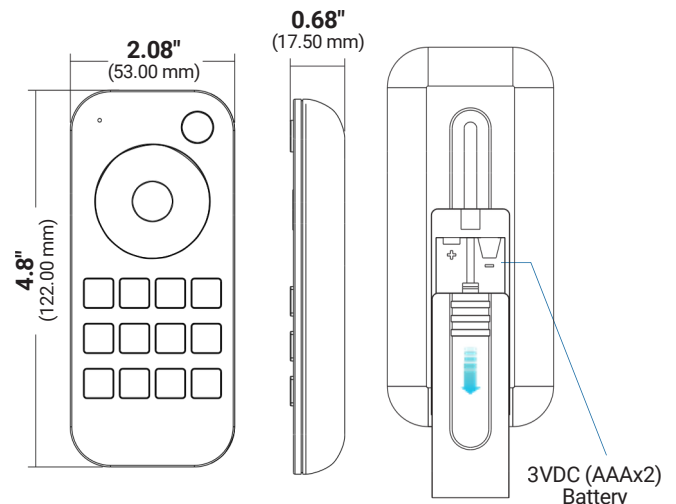

RGB/RGBW Touch Wheel RF Remote Controller

P/N: ES-RT-Z4-RGBW

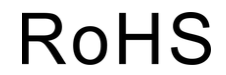

Statement

FCC ID Statement:

Mobile

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

IC ID Statement:


Mobile

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Safety Information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.
6. Please keep the remote control in a dry and cool place to avoid it becoming sticky due to improper storage.

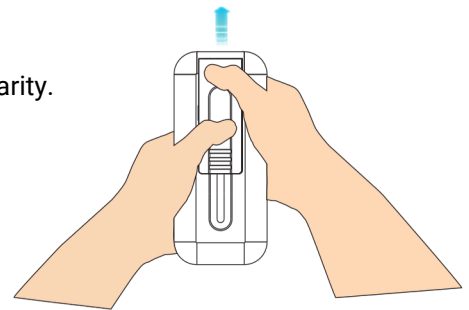

When replacing the batteries, use both hands to remove the back cover of the remote control.