RGB+CCT Touch Wall Panel
EnoSync RF Controller

P/N: ES-WS-Z1-RGBCCT-X

RGB CW CE RoHS

Match with RF LED Controller


Choose how to pair or remove the device. Two options are available.

Match Key Method



Step 1:

Short press the Match/Set button.

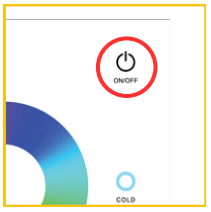

Step 2:


Immediately press on/off key on the touch panel.



Step 3:

The LED indicator will flash quickly several times, confirming successful pairing.

Remove Remote Control:

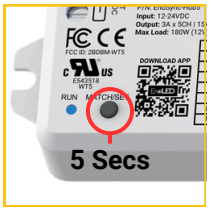

Step 1:


Press and hold the **MATCH key for 5s** to delete all matched remotes.



Step 2:


The LED indicator will flash quickly several times, confirming the remote was successfully removed.

Power Restart Method

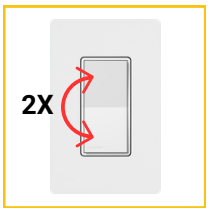

Step 1:

Switch the power off then on again **2 times**.

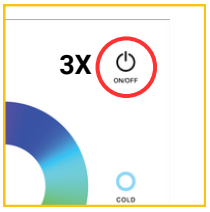

Step 2:


Immediately short press the **ON/OFF key 3 times** on the touch panel.



Step 3:


The light blinks 3 times means match is successful.

Remove Remote Control:

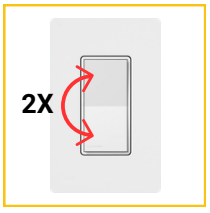

Step 1:

Switch the power off then on again **2 times**.

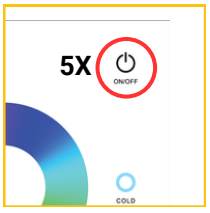

Step 2:

Immediately short press the **ON/OFF key 5 times** on the touch panel.



Step 3:


The light blinks 5 times means all matched remotes were deleted.

RGB+CCT Touch Wall Panel
EnoSync RF Controller

P/N: ES-WS-Z1-RGBCCT-X


RGB CW CE RoHS

Installation Diagram

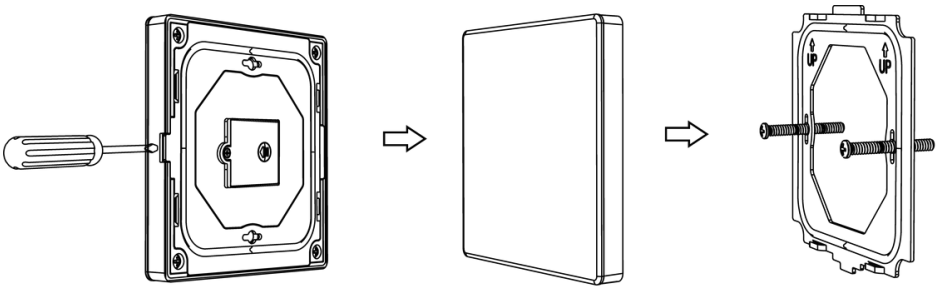


Wiring Diagrams

For RGB+CCT Touch Panel Dimmers

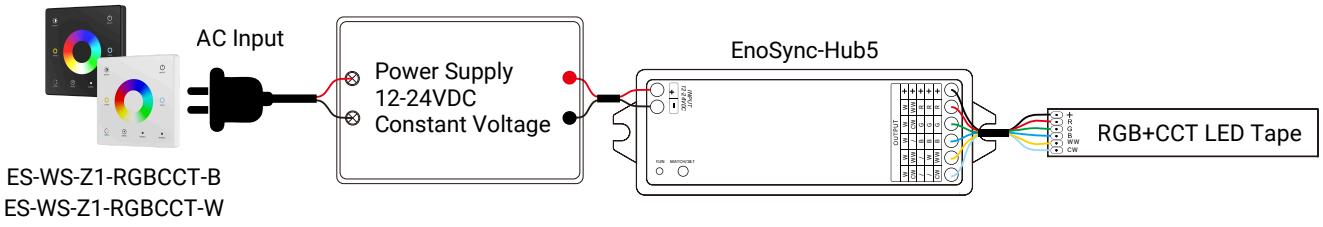

Safety Information

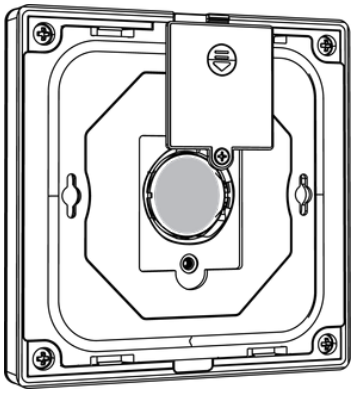

Note:

1. Before the first use, please remove the protective film on the battery.
2. Open the battery cover with a screwdriver.
3. If the LED indicator is not on when press key, it is due to dead battery or bad contact caused by multiple plugging, please replace the battery, or raise the battery shrapnel with a screwdriver

Ver. 102926